

PS4043

Pilot Suit


App. according to ETSO 2C503

Head office: VIKING LIFE-SAVING EQUIPMENT A/S · Saedding Ringvej 13 · 6710 Esbjerg V · Denmark Tel +45 7611 81 00 · Fax +45 76 11 81 01 · www.viking-life.com · e-mail: viking@viking-life.com Fig. 1

4.











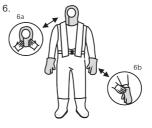


Fig. 2




Fig. 3



1. DONNING

See figure 1.

- 1. Remove footwear.
- 2. Don the lining.
- 3. Don the suit like an ordinary coverall.
- 4. Pull the neck seal over your head. Zip the front zipper.
- 5. Squat down to exhaust air.
- 6. Don the lifejacket.
- 7. Before immersion, don the hood and gloves. NB: The hood is placed in the right leg pocket. The gloves are placed in the sleeve pocket.

2. MAINTENANCE

After use

Hang the suit on a wide hanger and allow to air.

We recommend to rub a suited lubricant on the zipper. Put talc powder on the inside of the wrist and neck seals to reduce sticking.

3. PACKING

See figure 2.

- 1. Place the suit flat on a clean surface. Unzip.
- 2a. Fold up the socks to the crotch.
- 2b. Fold the legs up over the socks.
- 2c. Fold the sleeves across the chest.
- 3. Place the suit into the bag.

4. CLEANING

See figure 3.

5. INSPECTION, SERVICE AND REPAIR

We recommend that the suit is inspected at an approved servicing station once a year. Repairs should be carried out by an approved servicing station.

6. SPECIAL CONDITIONS

Store the suit in a dark and dry place in room temperature.